

621B SCRAPER

Hot Weather/Desert Operation

This abbreviated checklist is not to be used as a replacement for the -10 series Tech Manuals or any other PMCS guide

EXTREME HEAT/HIGH HUMIDITY

1. The converter and retarder temperature gauge, engine coolant temperature gauge and air system/engine oil pressure gauges should all be in the green range during operation.
2. Maintain engine coolant level to within ½ inch of the bottom of the fill pipe.
3. Check oil levels frequently to ensure proper levels are maintained and seals are not leaking.
4. Maintain batteries accordingly given the environment and check them regularly.
5. Check fuel levels and tire pressures daily and nightly as much as possible.
6. Drain fuel lines daily and nightly when necessary and possible.

DUSTY OR SANDY AREAS

1. Check hydraulic tubes and hoses for wear and/or fraying, as well as, loose mounting hardware and leaks.
2. Attend to any leaks or cracks promptly.
3. Check lubrication points/areas frequently.
4. Use caution when performing maintenance on cylinders and areas where fluids may be exposed.
5. Oil should be changed twice as often than would normally occur.

Approved for public release: distribution is unlimited

Distributor: U.S Training Support Center

Dec 2005